


# Submersible Pump

## ST-05

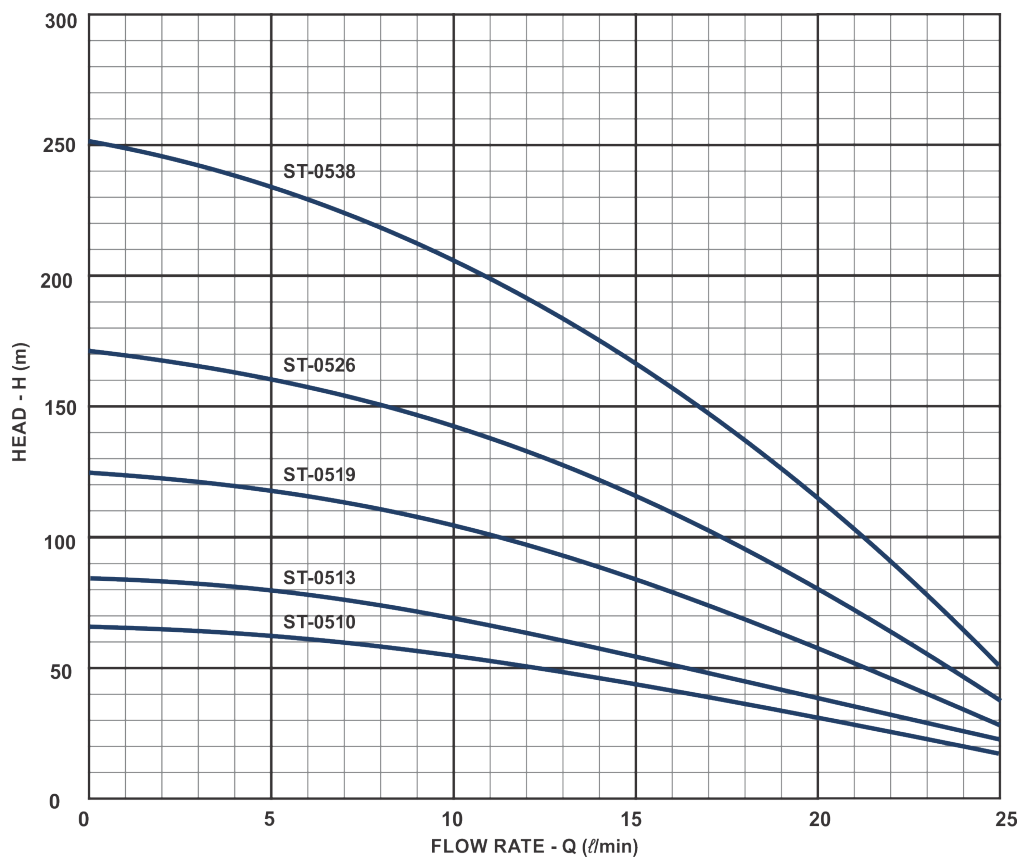

Selection Chart																			
Pump Type	Stages	Motor		Q = Delivery														PUMP	
				l/min	5	10	15	20	25	30	35	40	45	50	60	70	80	Length (mm)	Weight (kg)
		KW	HP	m <sup>3</sup> /h	0.3	0.6	0.9	1.2	1.5	1.8	2.1	2.4	2.7	3.0	3.6	4.2	4.8		
H = Total Head in Meters																			
ST-0510	10	0.37	0.5	67	63	55	46	33	18									324	3.3
ST-0513	13	0.37	0.5	86	78	70	56	42	23									377	3.7
ST-0519	19	0.55	0.75	126	118	105	86	60	30									481	4.7
ST-0526	26	0.75	1.0	173	160	141	117	81	39									642	5.8
ST-0538	38	1.1	1.5	253	234	208	169	117	52									864	8.2