


# Submersible Pump Curves

## ST-05

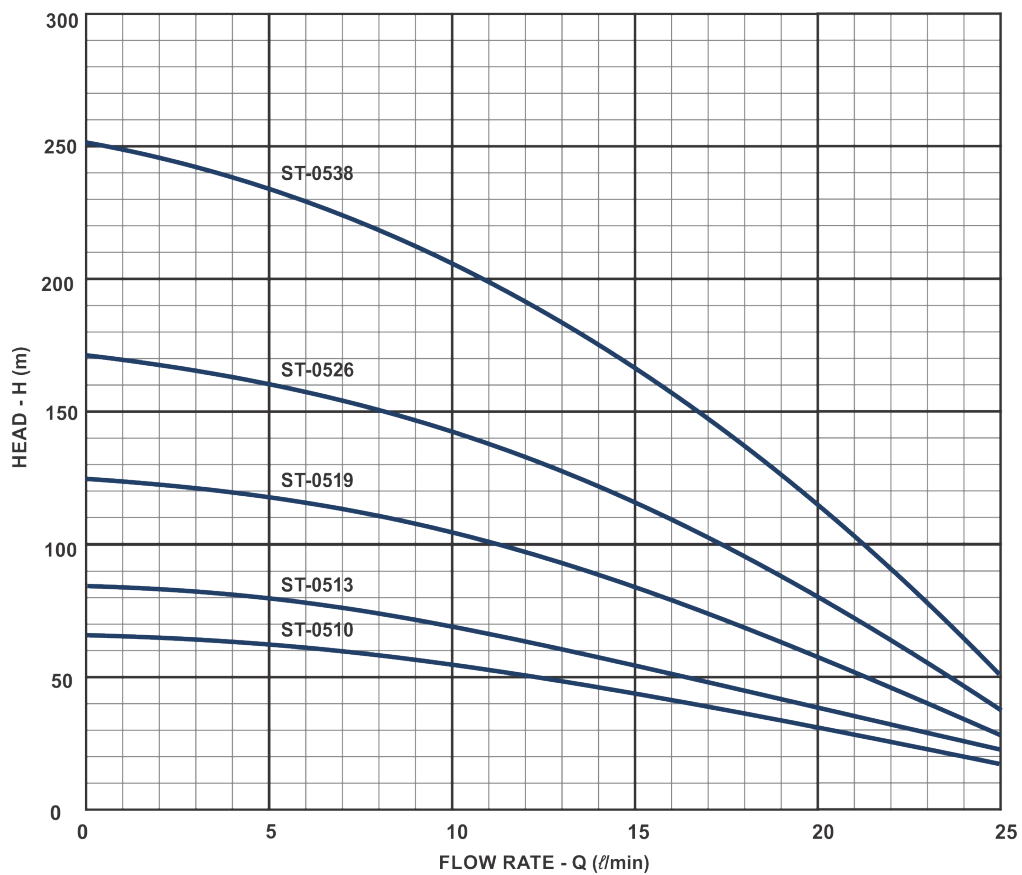

Selection Chart																					
Pump Type	Stages	Motor		Q = Delivery																PUMP	
				l/min	5	10	15	20	25	30	35	40	45	50	60	70	80				
		m <sup>3</sup> /h	0.3	0.6	0.9	1.2	1.5	1.8	2.1	2.4	2.7	3.0	3.6	4.2	4.8	Length (mm)	Weight (kg)				
H = Total Head in Meters																					
ST-0510	10	0.37	0.5	67	63	55	46	33	18										324	3.3	
ST-0513	13	0.37	0.5	86	78	70	56	42	23										377	3.7	
ST-0519	19	0.55	0.75	126	118	105	86	60	30										481	4.7	
ST-0526	26	0.75	1.0	173	160	141	117	81	39										642	5.8	
ST-0538	38	1.1	1.5	253	234	208	169	117	52										864	8.2	